


CAMSCURA TILT FIRMWARE UPDATE

NOTE: This firmware upgrade is for the Camscura Tilt models that may not have voice activated recording, scheduled recording or is missing the resolution option for 1280x720. If your camera has those options available then you have the most recent firmware available and do not need to do this.



Step#1 - Download and Install the software BHS Cam Setup Tool from our help article here. help.brickhousesecurity.com


Step#2 - Open and Run 2_fwupgrader_1_2_1

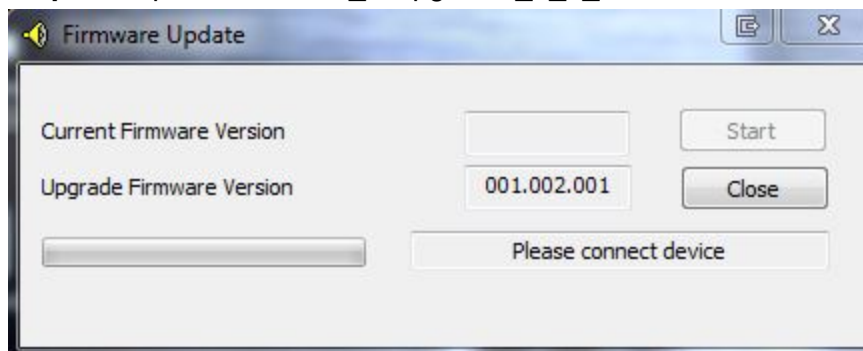

Step#3 - Plug your Mini USB cable into the USB port on your pc but do not connect it to the device.

Step#4 - With the SD card NOT inside of the device push a pin into the upgrade recessed hole in the back of the device.

Step#5 Then while still holding that button down connect the camera to the mini USB cable. You'll see the status bar on the Firmware Upgrade move along a couple of times.

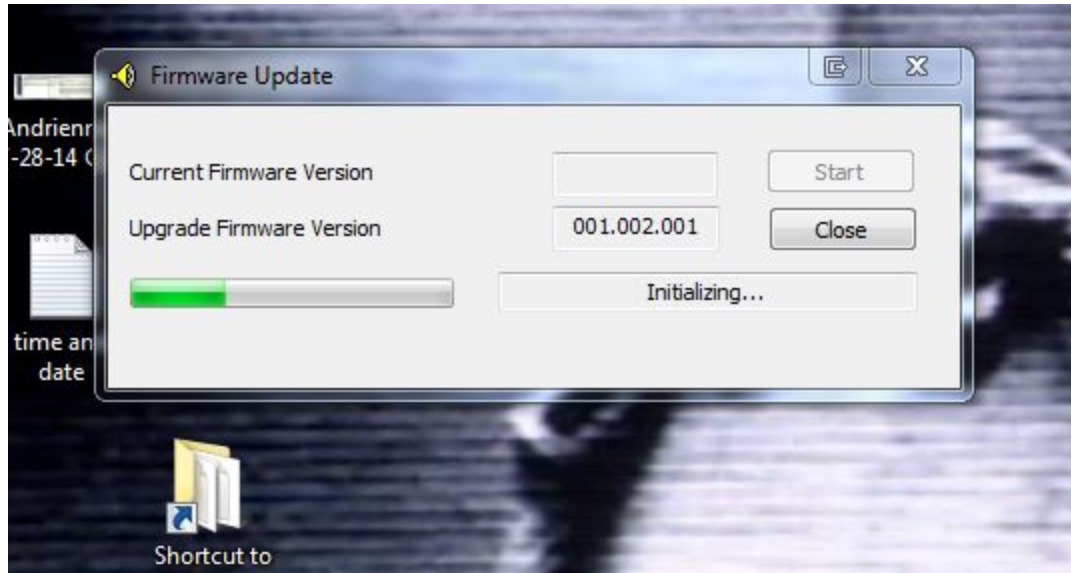

Step#6 The status that says Please Connect Device will change to say initializing and then go back to Please Connect Device. This means the upgrade is now complete.

DURING THIS PERIOD WHEN THE STATUS BAR IS MOVING:

PLEASE DO NOT REMOVE THE CAMERA

PLEASE DO NOT UNPLUG THE CAMERA

PLEASE DO NOT STOP PRESSING THE UPGRADE BUTTON WHILE PROGRESS BAR IS MOVING

If the process is disturbed the upgrade may fail and the device may freeze. If process is disturbed, use the pin on the reset button and try to run the upgrade again.

Step#7 When it is complete, unplug the camera and then place your micro SD card inside of it. Then reconnect the camera and open the BHS Cam Setup Tool. You will see the full settings options.